

PSA double coated tape for eyeglass lens edging

## Blocking Pad / Rikipad Z-6575M-2

### 1. Features

Rikipad Z-6575M-2 is developed as fixing material using for edging eyeglass lens.


Rikipad Z-6575M-2 have good performance for preventing angle twisting of various eyeglass lens after edging.

Rikipad Z-6575M-2 is easy to handle and have no-residue on the lens after edging.

For super-hydrophobic coating lens, please use anti-slip sheet together.

### 2. Composition

Release liner	:	Tab (PET Film)
PSA	:	PET Film
Carrier	:	Acrylic PSA (Lens side)
PSA	:	Polyolefin foam
PSA	:	Acrylic PSA (Block side)
Release Liner	:	OPP film (Blue color)

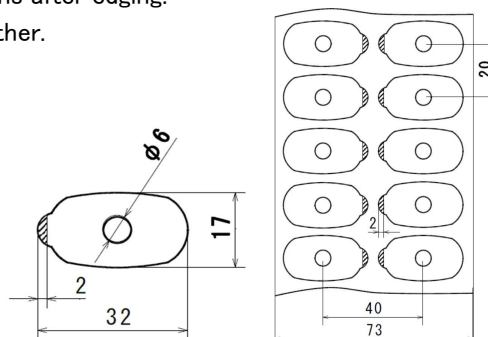

▲ CROSS SECTION

▲ TOP VIEW

### 3. Specification

1,000 pieces / Roll (3 inch core)

### 4. Adhesive Properties

Measurement items		Z-6575M-2	
		Block side	Lens side
90° peel strength (N/25mm)	SUS	5.2	7.9
Holding power (mm/1440min)	SUS	NC	NC

※The property values described in this document are actual measurements measured by us, not guaranteed values. Please consider and confirm whether the product is suitable for the intended use before use.

【Measurement condition】 \*Compliant with JIS Z 1528

Peel strength : Attach 25mm wide sample to the adherend (2kg rubber roller is pressure-bonded once at a speed of 300mm/min.). Leave it for 30minutes under 23° C x 50% RH conditions, and peel off by 90° at a speed of 300 mm/min. and measure the value.

Holding power : Attach a 25mm x 25mm sample to the adherend (2kg rubber roller/ 300mm/min. speed once for each direction), After leaving for 30min. Under the condition of 40°C, and then apply a load of 1kg for 24hrs, and measure the shifted length.

### 5. Caution

#### 【Handling precautions】

- Store in a cool and dark place away from high temperature and direct sunlight.

#### 【Safety and hygiene precautions】

- Do not stick directly on the skin.
- Before using, please wipe any oil, moisture and dust etc. on the adherent surface.
- If the usage environment is low temperature, it may be difficult to attach. Please store and use at room temperature in winter.
- Please read the Safety Data Sheet (SDS) before use. Please ask the sales department for SDS.

**VIGteQnos**  
VIGteQnos Co., Ltd.

Head Office / Main Plant 166-17 Shiroyamadai, Gose City, NARA, JAPAN 639-2261  
TEL: +81-745-66-2300 FAX: +81-745-66-2309  
TOKYO Office 4F, 1-4-1 Uchikanda, TOKYO, JAPAN 101-0047  
TEL: +81-33295-8235 FAX: +81-3-3295-9659  
OSAKA Office 6F, 1-8-2 Bakuromachi, Chuou-Ku, OSAKA, JAPAN 541-0059  
TEL: +81-6-6266-5582 FAX: +81-6-6266-5185